


## 11.0 Fitting and adjusting the seats

The seats in the Kangaroo can be positioned and adjusted individually, slid forwards or backwards or turned to face backwards, and the angle of the back support can be steplessly adjusted down to a horizontal sleeping position.



### 11.1


When fitting the seat, the back seat bracket must be inserted into the rail first, followed by the front bracket.

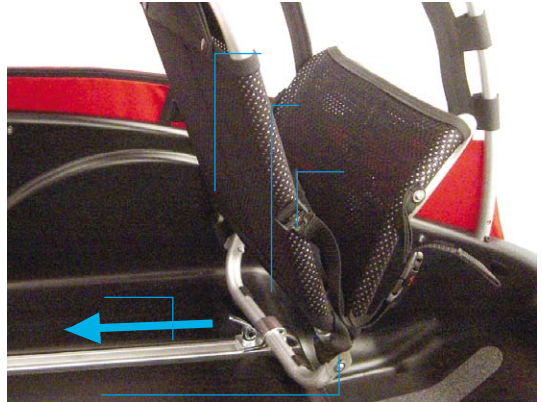

### 11.2

Riding position with maximum legroom.

When the seat is placed in the desired position, lock it with the two quick-release handles.

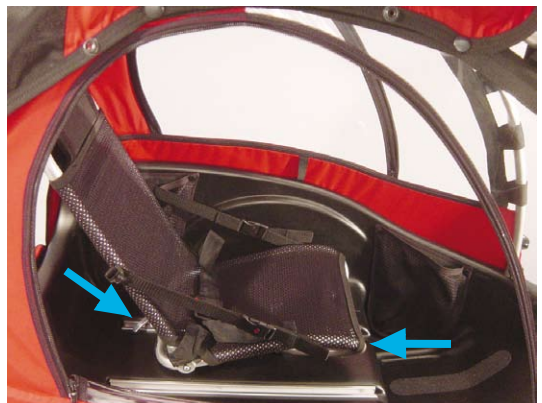



11.3  
The riding position with the seat as far forward as possible allows maximum luggage space behind the seat.



11.4  
Horizontal position.  
To place the seat in the horizontal position, slide it forwards and release both seat straps.



11.5  
To place the seat in the sleeping position, open the click fasteners on the seat straps by pressing on the red safety button.

### 11.6

#### Sleeping position

Slide the seat as far forward as possible over the foot space, so that only the back seat bracket is attached in the bottom rail.



### 11.7

Riding position facing backwards - suitable for small children, since the driver can have eye contact with the child.

If the seat is to be fitted facing backwards, draw it out of the base rail, turn it around and fit the front bracket into the rail first.

To place the seat in the horizontal position facing backwards, loosen both seat straps.

